

EM-FECS(B) - Evaluation Module for FECS-series Sensors

Description:


The EM-FECS(B) evaluation module is designed to perform the testing and evaluation of the three-electrode electrochemical gas sensors in the FECS-series. Since the output voltage (Vout) corresponding to the sensitivity characteristics can be obtained, the characteristics of the FECS sensor can be easily evaluated.

Features:

- * Compatible with all FECS-series sensors
- * Converts sensor output current to voltage output
- * Selectable load resistors dependeing on sensor model
- * Anti-polarization circuit during power OFF period

Operation:

The FECS-series sensor is placed into the sensor socket on the EM-FECS(B). If target gas is present, the output current generated from the FECS-series sensor (*1) is converted into output voltage. A linear relationship exists between output voltage and target gas concentration. By measuring in advance the output voltage in a known target gas concentration, that gas concentration can be calculated from the measured output voltage values. (*2)

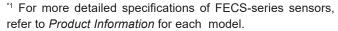

^{*2} The main function of this module is to simply convert sensor output current into voltage output without temperature compensation.




*Sensor not included

Specifications:

Item	Specification
Model No.	EM-FECS(B)
Product name	Evaluation module for FECS-series sensors
Target gases	CO (FECS40-1000) NO (FECS41-250) NO2 (FECS42-20) SO2 (FECS43-20) NH3 (FECS44-100/200/1000/5000) Cl2 (FECS45-10) H2S (FECS50-100)
Input voltage range (VIN)	5.0 ± 0.2V DC
Current consumption	<2.0mA
Output voltage (Vout)	- 1.00±0.05V DC in zero air [FECS40-1000, FECS41-250, FECS43-20, FECS50-100, FECS44- 100/200/1000/5000] - 2.50±0.05V DC in zero air [FECS42-20, FECS45-10]
Operating conditions	0~60°C, <95%RH (no condensation) For more details of operating conditions, refer to Product Information for each model.

Dimensions:

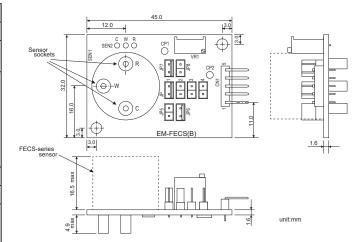

*FECS-series sensor is to be put in the sensor socket as shown in the above photo.


*Suggested female connectors mating to the 5-pin connector (JST MB5P-90S):

JST XHP-5P or JST 05JQ-BT





Schematic Diagram:

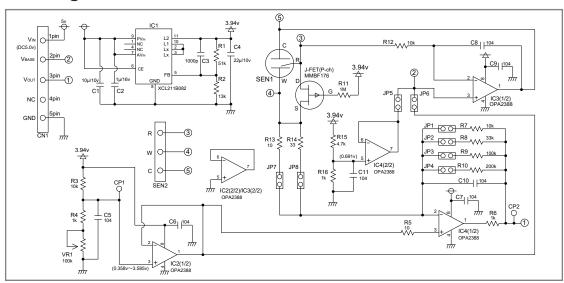

Jumper Pin and Base Voltage Settings(*3)

Sensor Model No.		Target gases	Amplifying factor for I-V conversion		Bias voltage		Base voltage	Volume adjustment	Recommended load resistor (Ω)		
FECS40-1000	СО	Carbon Monoxide	JP1	10,000 x	JP6	-	1.00V	No need	JP7	10	
FECS41-250	NO	Nitric Oxide			JP5	+300mV					
FECS42-20	NO ₂	Nitrogen Dioxide	JP3 100,000 x		100,000 x			2.50V	Necessary ^(*4)	JP8	33
FECS43-20	SO ₂	Sulphur Dioxide		JP3 100,000 x		100,000 x	P3 100,000 x	3 100,000 x			
FECS44-100					- JP6	-	1.00V	No need	JP8	33	
FECS44-200	NH3	Ammonia	JP4	200,000 x							
FECS44-1000	INIT3	Ammonia	JP3 100,000 x JP2 33,000 x	100,000 x							
FECS44-5000											
FECS45-10	Cl ₂	Chlorine	JP4	200,000 x			2.50V	Necessary ^(*4)			
FECS50-100	H ₂ S	Hydrogen Sulfide	JP1	10,000 x			1.00V	No need	JP7	10	

^{*3} Jumper pins are connected to JP1, JP6 and JP7 respectively at time of factory setting.

Pin connections:

Pin No.	Name	Description				
1	Vin	Input voltage	5.0±0.2V DC			
2	VBASE	Base output voltage	1.00V±0.05V at time of factory setting			
3	Vouт	Output voltage				
4	-	No connection				
5	GND	Ground				

Sensor output current Is (μA) is calculated from output voltage Vout (V) between Pin #3 (Vout) and Pin #5 (GND) using the following formula:

Is= ((Vout[Gas] - Vout[Air]) / I-V conversion amp. factor) x 106

where: Vout[Air] : sensor output voltage in zero air Vout[Gas]: sensor output voltage in target gas

Example: When output voltage of FECS 50-100 (typical sensitivity of 0.7µA for H2S) are as follows:



<u>Caution:</u>
This module is designed for evaluation of the FECS-series sensors only. Please do not use this module for any other purpose.

⁴ Base voltage adjustment method: Please adjust base voltage to 2.5V by VR1 while measuring the voltage value between VBASE (Pin 2) and GND (Pin 5).

^{*} The calculated Is value corresponds to the sensor output in around 100ppm H2S.